

80lb Broadcast Spreader

MODEL # 2050/2050P

ASSEMBLY INSTRUCTIONS

For assembly, flip up handle and tighten each wing nut to hold handle in position.





Thank you for selecting EarthWay for your spreader needs. Our production team in Northern Indiana takes pride in building this

spreader. Our customer support team is standing ready to ensure your success. Please contact us at www.EarthWay.com to see our full line of commercial, lawn & garden tools.

Note: Your EarthWay spreader includes a feature called side spread control. This feature turns off fertilizer from being spread to the left side. To activate this feature, slide the lever below the hopper to the right (if standing behind the spreader) and walk along a sidewalk or flowerbed that is 12"-14" on your left side. Fertilizer will not spread to the left. This feature is better than a deflector as no material is wasted by the deflector.

For spreading, please utilize the following spreader settings:


Spreader	Lbs sq	Grams sq			
Setting	foot	meter			
11	1.0	5			
13	2.0	10			
14	3.0	15			
16	4.0	20			
17	5.0	25			
18	6.0	30			
19	7.0	35			
20	8.0	40			
22	9.0	45			
23	10.0	50			



80lb Broadcast Spreader

MODEL # 2050/2050P

ASSEMBLY INSTRUCTIONS

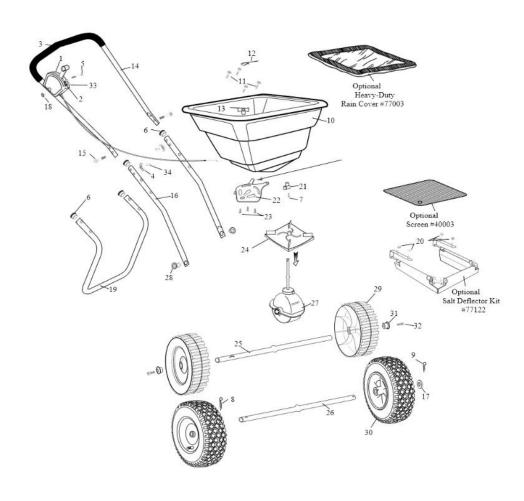

2050P PARTS LIST											
Key#	Part #	Description	Key#	Part #	Description	Key#	Part #	Description			
1	60515	CONTROL ASSEMBLY	11	31161	#14 X 1 3/4 TYPE AB HWHS ZINC	21	12318	LOWER HOUSING CLIP			
2	12222	INDICATOR-BROADCAST	12	33117	AGITATOR	22	12221	SHUT OFF PLATE			
3	70192	.840" X .150 X 21" GRIP	13	12209	HOPPER BUSHING	23	31138	#8 X 3/8" PMT #8 HD COARSE BLACK			
4	60027	WING NUT ASSEMBLY BLACK	14	60364	UPPER HANDLE ASSEMBLY	24	12248	IMPELLER DISHED			
5	37108	1/4-20 X 1 3/4" CARRIAGE BOLT ZINC	15	37106	1/4-20 X 2" CARRIAGE BOLT ZINC	25	70142	NUT PROTECTOR			
6	19132	7/8" TUBE PLUG	16	25220	LOWER HANDLE	26	23511	AXLE (2050P)			
7	31124	#10 X 5/8" TYPE A PHPS ZINC	17	34103	1"OD X 17/32"ID X 1/32" WASHER ZINC	27	60404	GEAR BOX ASSEMBLY			
8	33107	1/8" X 1 3/4" COTTER PIN S.S.	18	32100	1/4-20 HEX NUT ZINC	28	12197	SPACER BEARING			
9	33106	1/8" X 3/4" COTTER PIN ZINC	19	25701	STAND	29	32106	10-24 WING NUT ZINC			
10	60363	HOPPER ASSEMBLY	20	32103	1/4-20 NYLON INS LOCKNUT ZINC	30	70106	10" PNEUMATIC DRIVE WHEEL (2050P)			



80lb Broadcast Spreader

MODEL # 2050/2050P

ASSEMBLY INSTRUCTIONS

CUSTOMER SERVICE

574.848.7491 | SUPPORT@EARTHWAY.COM | www.EARTHWAY.com | 1009 Maple Street, Bristol,

ONE YEAR WARRANTY

The manufacturer warrants this product free of defects in original workmanship and materials for a period of one year to the end user with the original purchase receipt. If a manufacturing non-conformance is found, the manufacturer. at its discretion will repair or replace the part(s)/product at no charge provided the failure is not the result of incorrect installation, mishandling, misuse, tampering, or normal wear and tear as determined by the manufacturer.

The manufacturer at its discretion may require that the part(s) or product be returned along with the original purchase receipt for examination and compliance with the terms of this warranty. Do not return any product without first receiving authorization. To seek remedy under this warranty, contact the manufacturer at 574-848-7491, or write 1009 Maple Street, Bristol, IN 46507 and describe the nature of the manufacturing defect. SPECIFIC LIMITATIONS: This warranty covers only the part(s) or product; any labor charges associated with repair or replacement of non-conformances are specifically excluded. Due to the corrosive nature of most fertilizers and ice melt products, the manufacturer makes no warranty against and specifically excludes part(s) or product degradation or failure due to corrosion or its effects.